


J


Ersatzteile - Spare parts - Pièces de rechange - Reserveonderdelen - Parti di ricambio - Reservedele - Reservdelar
|´p´ñā´ćž .ñóĀáúĥ´ëüÊìîÊžWμøp´ÆiüÆüGž!zā´ĆpĒaĥÊăžfŭÊaÊÆÊāÁØŭĒÀžЗапасные части - 备件

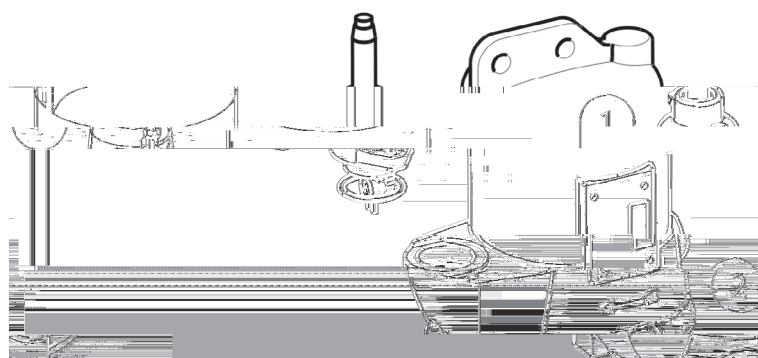


①	n	on o n	
	B		JP47285
			JP47286
	?	?	JP45786
	?		JP45787
②			JP48871
③	c		JP43713
④	n d c	v c d	JP42798
⑤	U c	o	JP47287
⑥	B		JP44861
⑦	n	on o	JP47304
⑧	v	L v con o	
	L n	c	JP43712
	L n	c	JP48227
⑨	n	n	JP43710
⑩	A	n An o	JP43709
⑪			
	B		JP46754
	B		JP48684
			JP45778
			JP45779
	?		JP45780
	?		JP48826
	?		JP48827
⑫	n	c conn c o	JP43705
⑬		o n v	JP46813
⑭	c		JP43706
⑮	o		JP46812
⑯	B	B	JP43714
⑰	c		JP47966





① Leitung	Cable
JP43717	10/4, 15/4, 25/4
JP43721	1010/4 BWI; 4 m
JP43695	1010/4 BWI; 15 m
Stator + Housing	② Stator + Gehäuse
JP43722	1010/4 BWI
or shaft	③ Rotorwelle
JP45791	10/4, 15/4, 25/4
JP43801	1010/4 BWI
or seals	④ Motorabdichtung
JP43806	
eller fixation	⑤ Laufradbefestigung

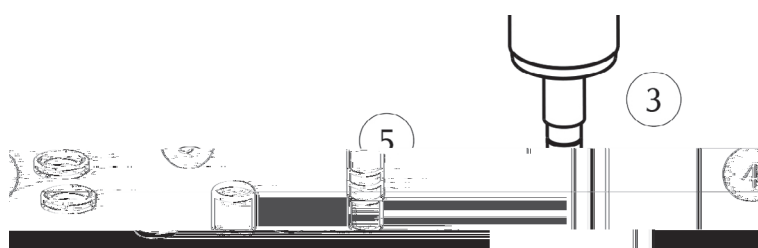

JP43802	10/4, 15/4, 25/4
JP43803	1010/4 BWI
Bearing set	⑥ Lagersatz
JP43774	
Bearing housing	⑦ Lagerschild
JP43770	
Seal set	⑧ Dichtungssatz
JP43807	

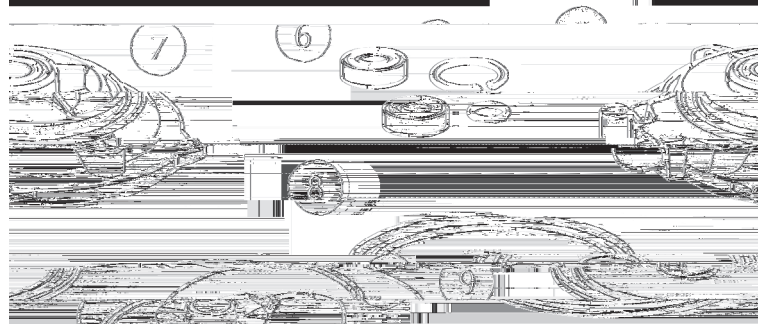

⑨ Laufrad	Impeller
JP43720	1010/4 BWI
JP45793	10/4
JP45794	15/4
JP45795	25/4

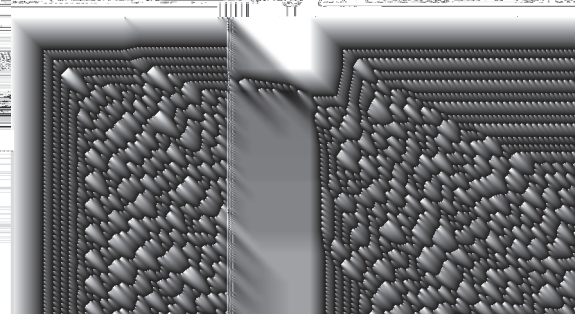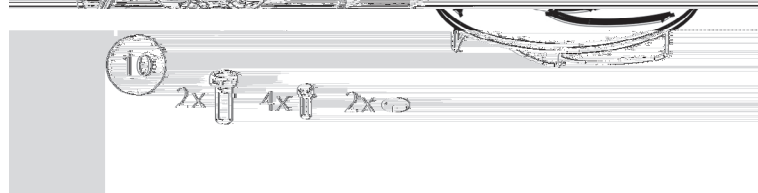

UC 25/2 - 35/2

①	L n		JP43717
②			
